

STAR 6 - STAR 13 - Quick start guide




This document does not replace the user manual.
To consult all the instructions, refer to the user manual.



1. OPERATING THE MACHINE FROM THE GROUND CONTROL PANEL

1 Pull the **emergency stop buttons** on both the platform and the ground control panels.

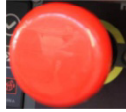

2 **Ground control panel controls** : Turn the control panel activation selector key downwards to activate the ground control panel (orange position).




3 **Mast Extension/Retraction** : Press and hold the "Dead Man's" button and set the selector to the desired movement.



4 Press and hold the "Dead Man's" **button** to authorise the movements. When the selector switch is released, the movement will stop.




5 **ONLY USE THE EMERGENCY STOP BUTTON IN CASE OF NECESSITY.**

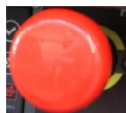



2. SWITCHING OFF THE MACHINE

Turn the control panel activation selector key to position O at the midpoint.

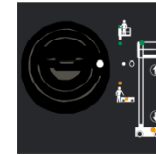

EMERGENCY LOWERING : if an operating problem prevents the user on the platform from descending, a competent operator can do this from the chassis.

• Press and hold the push button (1) on front of the machine, to lower the mast.

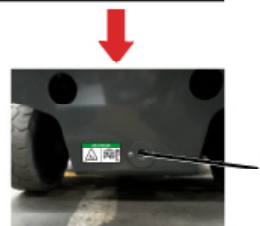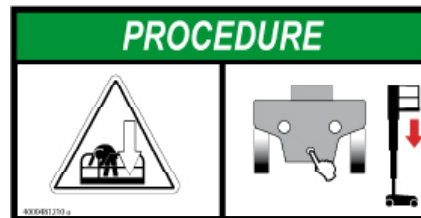

• Release it to halt lowering.




To avoid any risk of overturning, it is forbidden to lower overloads using emergency lowering.

FAULT DISPLAY



Machine fault indicator : flashes if operating fault is detected

EXAMPLE OF AN ALARM

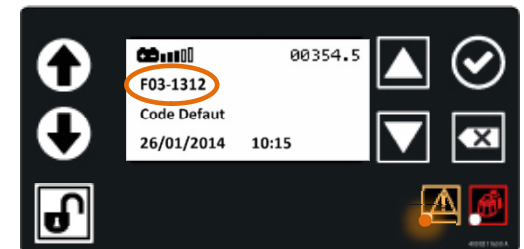

Refer to the Maintenance Book to identify the alarm codes.

STAR 6 - STAR 13 - Quick start guide



This document does not replace the user manual.
To consult all the instructions, always refer to the user manual.



3. OPERATING THE MACHINE FROM THE PLATFORM CONTROL PANEL

1 Pull the emergency stop buttons on both the platform and the ground control panels



2 **Ground control panel controls :**
Turn the control panel activation selector key upwards to activate the platform control panel (green position)



3 **Driving, Mast, Steering :**
Push the selector to the right to activate drive or to the left to operate mast extension/retraction.



• Press the thumb button corresponding in the desired direction.



4 Pressed in and maintained the joystick trigger to operate movements.

(If the joystick is not moved for 8 seconds, the movement will be cancelled)

5 **ONLY USE THE EMERGENCY STOP BUTTON IN CASE OF NECESSITY.**



4. SWITCHING OFF THE MACHINE

From the ground control panel, turn the control panel activation selector key to position O at the midpoint.



INFORMATION - WARNING LIGHTS



- 1) Horn control
- 2) Battery charge indicator :



Batteries charged



Flashing : Less than 40% of charge remaining




**Constantly lit : Only 20% of charge remaining
Recharge the batteries ASAP**

- 3) Machine fault indicator
- 4) Tilt indicator


EXTENSION DECK (IF FITTED)

N.B. : Do not load the extension deck, for ease of manoeuvring.
Ensure that gate or sliding bar is in its proper closed position.
Perform these operations on flat, horizontal ground.

1 Press the pedal (1) to release the extension deck lock pin.

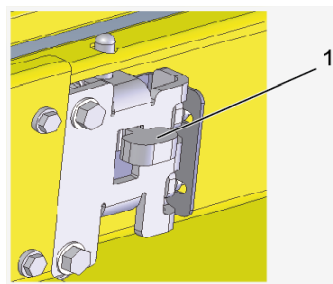

2 With pedal (1) pressed, push the extension deck guard rails (2) to the extended position

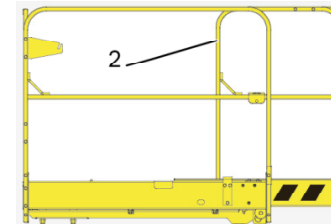

Make sure that the extension deck is in locked position

3 To retract the extension deck, press pedal and pull the extension deck rails inwards to the locked position. Release the pedal.